

Register your product and get support at
www.philips.com/welcome





PhotoFrame






SPF2527



    EN Quick start guide

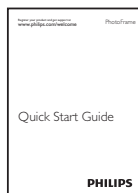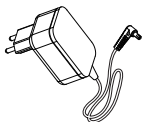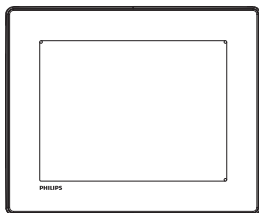

PHILIPS

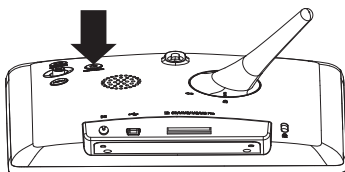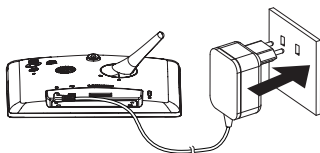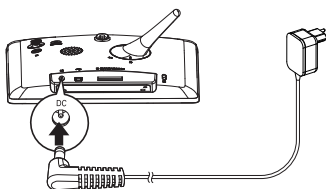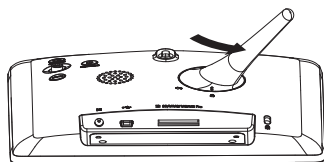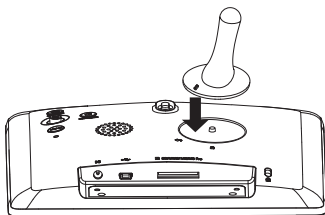     








English



Know these buttons

Control Buttons	Functions
	<ul style="list-style-type: none">- Press to turn on the PhotoFrame- Press and hold to turn off the PhotoFrame- Press to switch mode: slideshow/clock/calendar
	<ul style="list-style-type: none">- Press to go back step by step- Press and hold to access the home screen
MENU	<ul style="list-style-type: none">- Press to enter/exit a menu
OK (joystick)	<ul style="list-style-type: none">- Press to play, pause, or resume slideshow- Press to confirm a selection- Move up/down/right/left to select the upper/lower/right/left option

Know these keypad icons


	Input in English
	Input in supported European languages
	Input in Simplified Chinese
Русский	Input in Russian
\$#* / ABC	Switch to select symbols, punctuations, alphabet or numbers
aA	Switch between upper and lower case
	Enter a blank space
	Enter a line break

  Startup

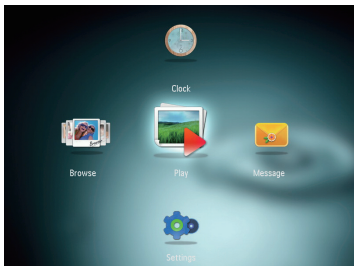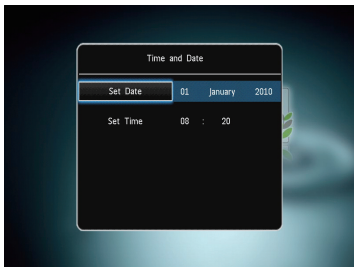

- 1 Connect the power cord to the **DC** socket of the PhotoFrame and then to a power supply socket.
↳ A few seconds later, the PhotoFrame turns on automatically.
- 2 Move the joystick up/down to select a language, and then press **OK**.
- 3 Move the joystick up/down/right/left to set time and date, and then press **OK**.
- 4 To start PhotoFrame, select **[Start PhotoFrame]** and then press **OK**.
- 5 To start slideshow, select **[Play]** and then press **OK**.
 - To pause slideshow, press **OK**.
 - To resume slideshow, press **OK** again.
 - To turn off the PhotoFrame, press and hold **⏻**.

 Transfer/Play media via a storage device

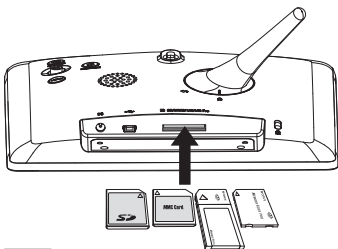

Note

- For details on the supported media formats, see the digital User Manual in the supplied CD-ROM.

Media type supported:

 
- Photo (JPEG)
- Video clip
- Background music

Storage device supported:

- Secure Digital (SD)
- Secure Digital High Capacity (SDHC)
- Multimedia Card (MMC)
- Memory Stick (MS)
- Memory Stick Pro (MS Pro)

- 1 Insert a storage device into the PhotoFrame.
↳ An option menu is displayed.
- 2 Select an option, and then press **OK**.
- 3 Follow the on screen instructions to:
 - Play media on the storage device
 - Browse media on the storage device
 - Copy media on the storage device to PhotoFrame

View a created message

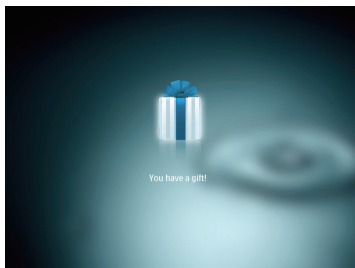




View a pop-up message:

If you have a pop-up message, the PhotoFrame prompts that you have a gift. Then, press **OK** to view the message.

View a message via the home screen:


- 1 In the home screen, select **[Message]** and then press **OK**
- 2 Select **[View Message]**, and then press **OK**.
- 3 Move the joystick right/left to select a message, and then press **OK** to view the message.

   Create a message

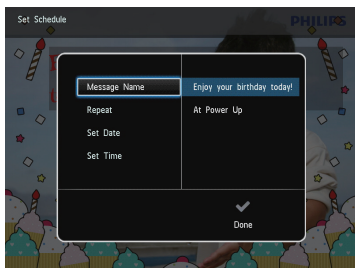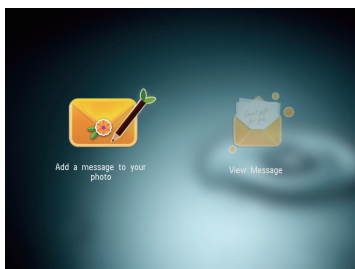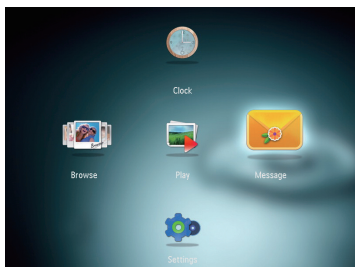

Tip

- If there is no message created before, at power up select **[Personalize Frame]** to add a message to your photo or to view a message.

- 1 In the home screen, select **[Message]** and then press **OK**.
- 2 Select **[Add a message to your photo]**, and then press **OK**.
- 3 Move the joystick right or left to select a message template, and then press **OK**.
 - Add music to the message.
 - Edit the text of the message or change photo of the message.
 - Set the real time and date if applicable.
- 4 Select **[Done]**.
 - ➔ The screen prompts you to schedule the message.
- 5 Schedule the message.
 - **[Message Name]**: Enter the name
 - **[Repeat]**: Select a repeat frequency
 - **[Set Date]**: Set the date or day
 - **[Set Time]**: Set the time
- 6 After you schedule the message, select **[Done]** and then press **OK**.
 - To view the available messages, select **[View Message]**.
 - To go back to the home screen, press and hold .



© 2010 Koninklijke Philips Electronics N.V.
All rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

